

Replacing the 1.6A fuse on a Seip TS75 door operator


IMPORTANT: You must disconnect the unit from the main supply before starting this procedure. All work is undertaken at your own risk.

If in doubt, this task should be undertaken by a competent technician


Tools required. Long nosed pliers, a small flat bladed and a small Phillips type screwdriver.



1. Remove retaining screw and flip open the cover.

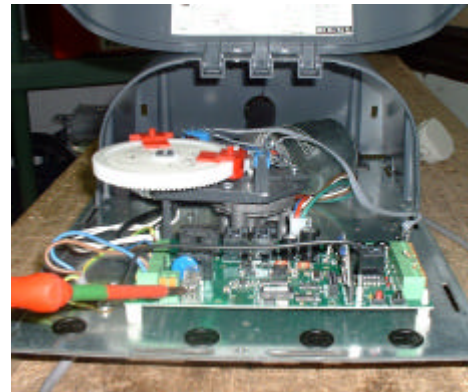

2. Locate the 1.6Amp fuse

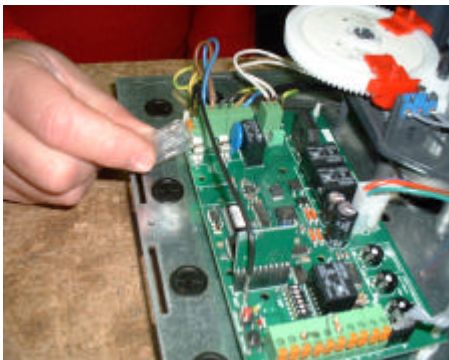

3. Remove clear plastic fuse cover and replace the fuse with new. (1.6AT time delay 20mm fuse)

4. "Flip" cover back into place and replace the retaining screw.

Amourelle Products Limited - The UK's #1 Garage Door Spares & Automation Specialists

www.Garage-Door-Automation.co.uk - For further technical advice phone: 0118 969 4657