## Replacing the 1.6A fuse on a Seip TS75 door operator

IMPORTANT: You must disconnect the unit from the main supply before starting this procedure. All work is undertaken at your own risk.

## If in doubt, this task should be undertaken by a competent technician

Tools required. Long nosed pliers, a small flat bladed and a small Phillips type screwdriver.



1. Remove retaining screw and flip open the cover.



2. Locate the 1.6Amp fuse



- 3. Remove clear plastic fuse cover and replace the fuse with new. (1.6AT time delay 20mm fuse)
- 4. "Flip" cover back into place and replace the retaining screw.

For further technical advice phone: 01384 900 264

**Amourelle Products**, Unit 16 James Scott Rd, Halesowen, West Midlands B63 2QT - www.Garage-Door-Automation.co.uk

The Garage Door Spares & Automation Specialists